



TIP

Pair with the Maestro activator for sound.



COVER



Graphic options available

SOUND SPRAY

PLAY ZONES

0 - 4

5 - 8

9 +

HIGHLIGHTS

Tune into play with Sound Sprays! Cover the spray nozzle to trigger sounds from the Maestro activator's speaker (required for sound play). Program your feature with selections from our sound library.

WATER DISPLAY

spray effect



interactive



sound



discovery play

PRODUCT COLLECTION

JamSessions

COLOURS

See Waterplay Colour Collections