


# WHIRLER

0010-3054



Optimize water use and maximize play value with Waterplay's on demand button activators. A perfect solutions for reducing water consumption while creating a dynamic play experience. **TWIST** to start the flow of water.

See Specification Sheet for product data.

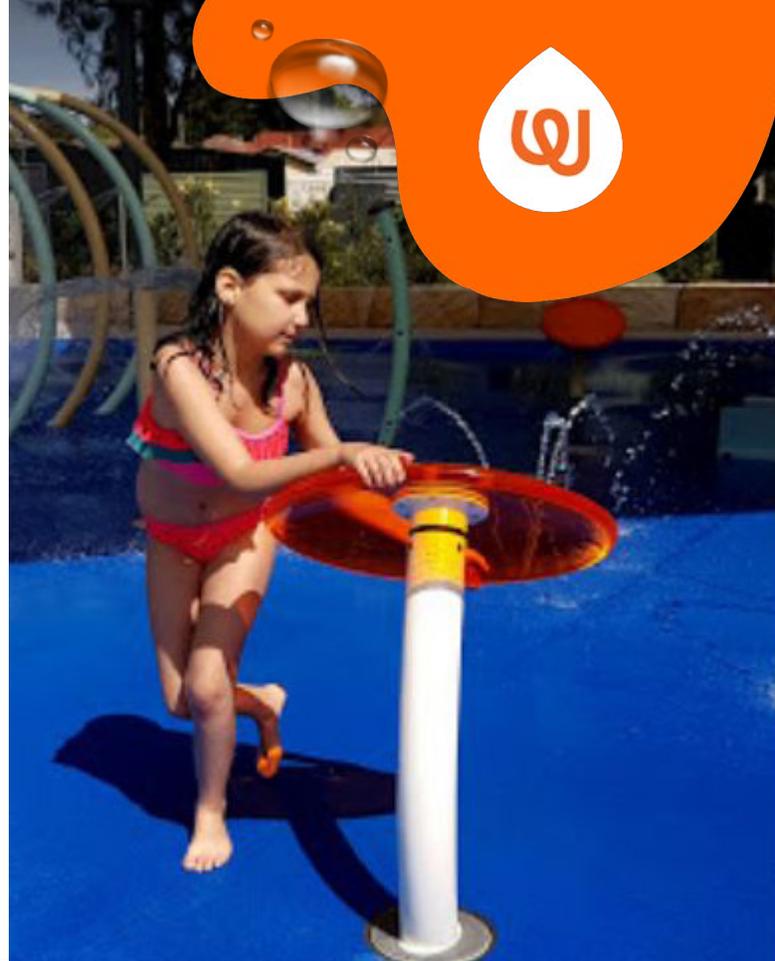

## WATER EFFECT

N/A



## INSTALLATION

ZERO-DEPTH



## PLAYPHASE™

DETACHABLE MOUNTING SYSTEM

## PLAY OPPORTUNITIES:

Bring surrounding play features to life by spinning the Whirler's disk. Waterplay's Action Activators™ are the perfect blend of play value and water conservation.



COGNITIVE



SOCIAL



PHYSICAL



CREATIVE

Play is fundamental in childhood development, health and wellbeing. Waterplay products are designed using research that supports cognitive, social and emotional, creative and physical growth. The above icons represent the leading attributes associated with this play feature.

## PLAY ZONES:



DEVELOPMENT



DISCOVERY



EXPLORATION



ADVENTURE

**CATEGORY:** Activators, Nature, Nautical **PRODUCT LINE:** Freestanding Play & Water Mangement



1.800.590.5552 (USA & CAN) | +1 (250) 712.3393 (INTL)  
info@waterplay.com | www.waterplay.com

For full product specification details, please refer to the product specification document. Due to our continuing product improvement program, Waterplay reserves the right to change the product specifications without notice. All product designs at all times remain the property of Waterplay or are used under license and cannot be used or reproduced without written permission.